


# How to Display the Epson Interactive Whiteboard When a Source is Selected?

By Scott Badger

1. Tap the whiteboard below the projector either with your finger or the Epson interactive pen.

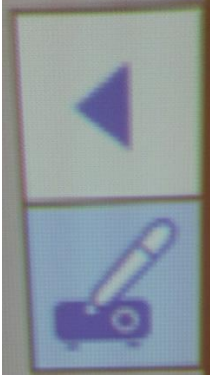

2. If you see the right blue arrow and the PC Free Mode icon, please move to step #5. If you don't, please move to step #3.




3. If you only see the PC Mode icon, please tap it with either your finger or the Epson interactive pen.




4. Tap the PC Free mode icon with either your finger or the Epson interactive pen.



5. Tap the blue arrow icon with either your finger or the Epson interactive pen.

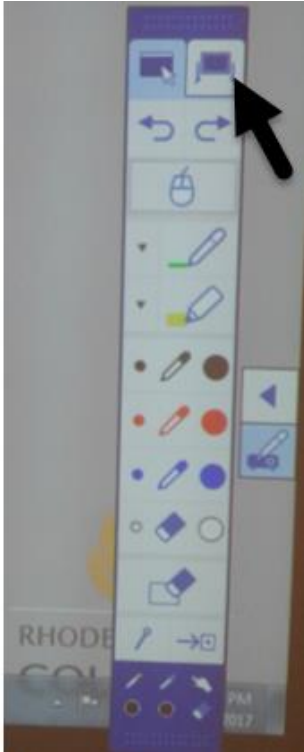

6. Currently you are seeing the source being displayed up on the whiteboard. Now tap the Whiteboard icon with either your finger or the Epson interactive pen.

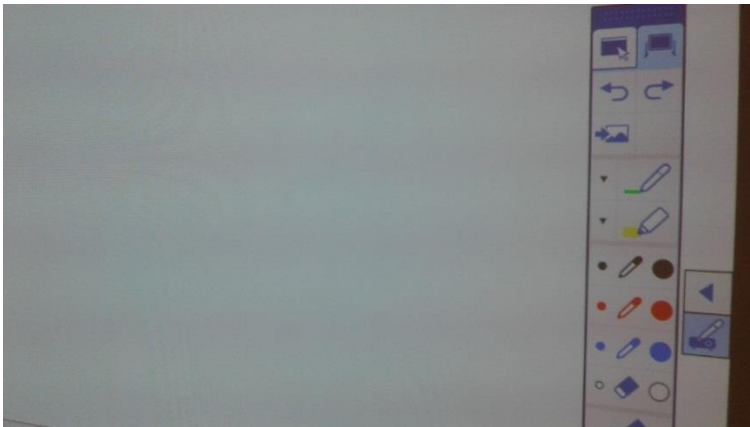

7. The interactive whiteboard is not being displayed.



8. If you want to display the source, such as the PC, you just need to tap on the source icon.