



Using the Projected Screen as a Whiteboard (Built-in Whiteboard Mode)


You can use the interactive pens or your finger (BrightLink 695Wi) to write or draw on the projection surface just as you would on a chalkboard or dry erase board. You can use one pen, both pens at the same time, or a combination of pens and finger touch (BrightLink 695Wi).

1. Hover near or tap the board or projected image with the interactive pen or your finger (BrightLink 695Wi). Tap the whiteboard icon on the toolbar. You see the whiteboard screen, with the main toolbar on the side and the projection control toolbar on the bottom of the screen:

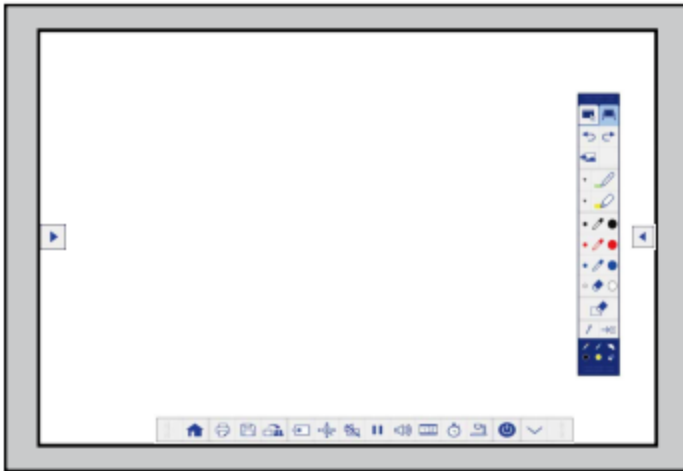

2. To move the main toolbar to the other side of the screen, tap the arrow  on the opposite side of the screen.

3. To close the main toolbar, select the  icon at the bottom of the toolbar.

Note: If you want to hide the toolbar automatically after drawing, select the  icon at the bottom of the toolbar.

4. To show or hide the projection control toolbar, select the  arrow.